

Galaga

Installation Guide



<https://highscoresave.com/>

Steps for a successful install of your online or offline high score save kit -

- Ensure your gameboard is working 100% before installing kit
- Ensure power to game is off before removing your gameboard from cabinet
- Label any connectors that you will be disconnecting. This will make reinstalling easier once kit is on gameboard
- **Note which way your connectors/cables are on.** (We suggest taking pictures to help you remember!)
- Work in a well-lit area on your workbench

The Galaga kit contains -


- 1 – z80 Daughter card

Please note – you will need a z80 to install on this kit. There is an option to purchase in the drop downs of the product page when you order. Or you can use an existing one.

Overview –

Start with locating your z80 socket.

This is what your pcb should look like. There are 3 different PCBs that the Galaga kit will work with. **Please note where the kit will install on the PCB of what you have.** This kit will only work on a Galaga PCB.

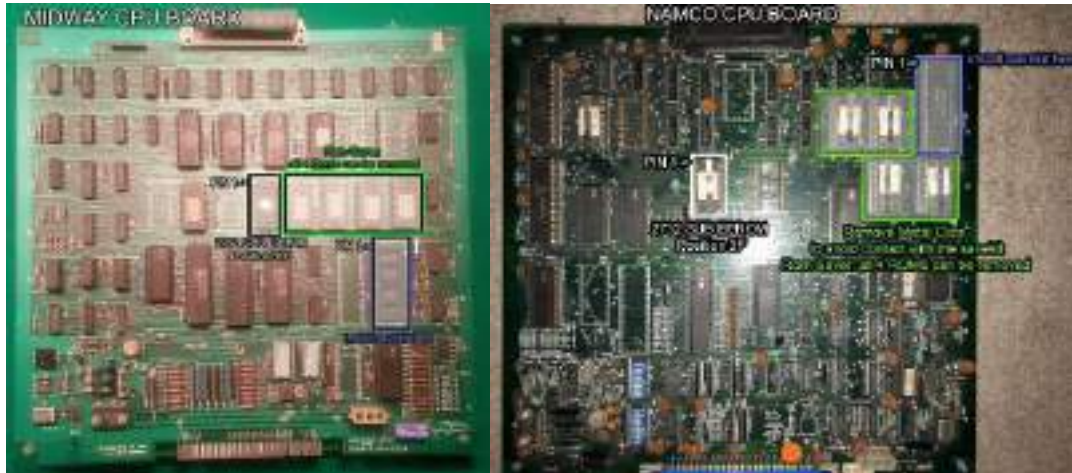

1. Locate your z80. Remove.
2. Install the z80 onto the daughter card then attach on PCB like this.
[Ensure PIN 1 of the z80 is installed with the proper orientation]-

Pin1 on z80 –



3. Ensure that nothing is hitting the underside of the new daughter card from your original PCB. Sometimes test points on your PCB need to be bent away.
4. Insert/replace the new 2732 eprom on your pcb with the one provided.

[on the Galag pcb pictured above. Remember, change to bootleg in menu...you can hold down P1 button while powering cabinet on...the additional 2732 Eprom should go on socket J4 (NOT K4)]

... All others look at the pics above. Midway PCB is at 3HJ and the Namco PCB is at 3F

That's it!

Double check your work

Install back in cabinet using pictures you took and any marked connectors

Power up the game and enjoy!

If the game does not start, turn power off immediately, double check your work.

Helpful link - <https://highscoresave.com/highscoresaves-kit-tips-and-tricks>

How do I get to the menu settings?

With the power off on your game. Press and hold P1 while you turn the game on. Release P1 button when the screen tells you to. You are now in the main menu settings. This is a feature built into your kits, so the menu settings are not accessible to your guests or family.

Now, having said that, you need to enable this feature in the menu settings, or disable if you want your kit to give you approximately 5 seconds every time you turn on your game.