


Juno First Installation Guide

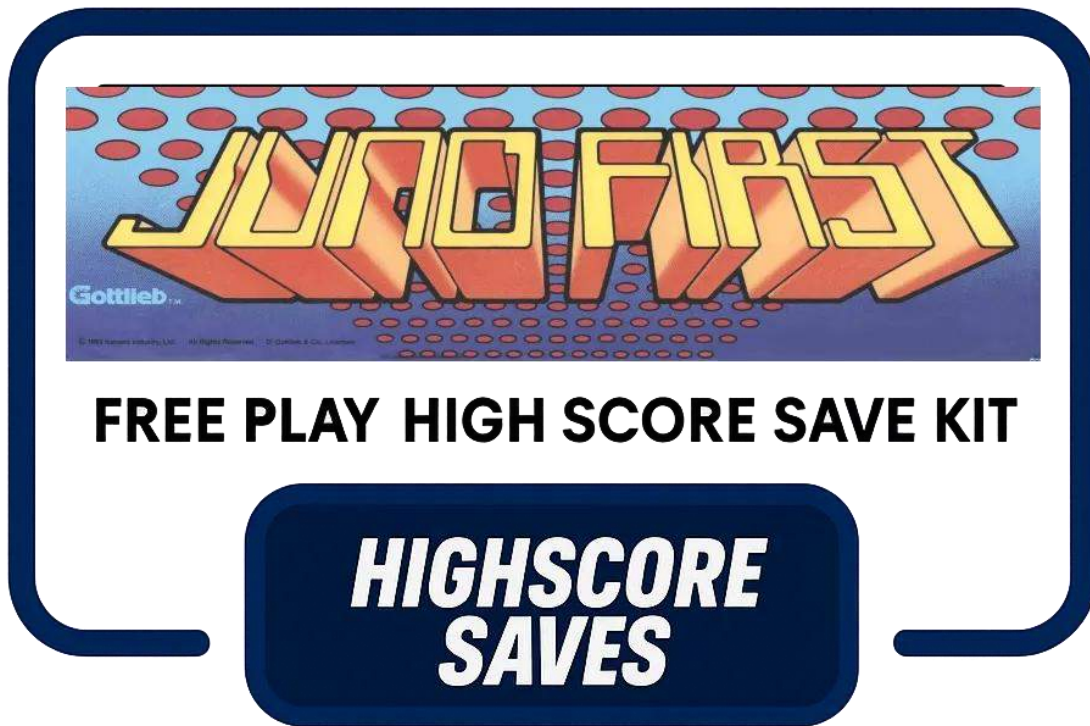

[Visit HighScoreSaves.com](http://HighScoreSaves.com) – Free Play & High Score Save Kits

Overview

Follow this short pre-install checklist to ensure a smooth, safe installation and reliable operation of your high score save kit.

Safety First

- **Power Off & Unplug:** Turn the game **off** and **unplug the cabinet** before touching the game board.
- **ESD Precautions (Recommended):** Work on an anti-static mat and ground yourself to avoid electrostatic discharge.

Preparation Checklist

- **Verify Board Health:** Confirm your **game board is 100% working** *before* installing the kit.
- **Remove Board Safely:** With power **off**, carefully remove the game board from the cabinet.
- **Label Connectors:** Tag **every connector and cable** you disconnect. Clear labels make re-installation fast and accurate.
- **Record Orientation:** Note the **orientation of each connector/cable**. *(Tip: take photos from multiple angles for reference.)*
- **Set Up Your Workspace:** Use a **well-lit workbench** with enough room to lay out the board, kit, and tools.

Next Step

Follow the instructions step-by-step using the photos below and the labels you created during the preparation checklist.


The Juno First kit contains -

- 1 - 6809E Daughter card, 1 - Konami1 adapter

Please note – you will need a 6809E to install on this kit. There is an option to purchase in the drop downs of the product page when you order. Or you can use an existing one.

Overview –

This is what your pcb should look like. This kit will only work on a Juno First PCB.

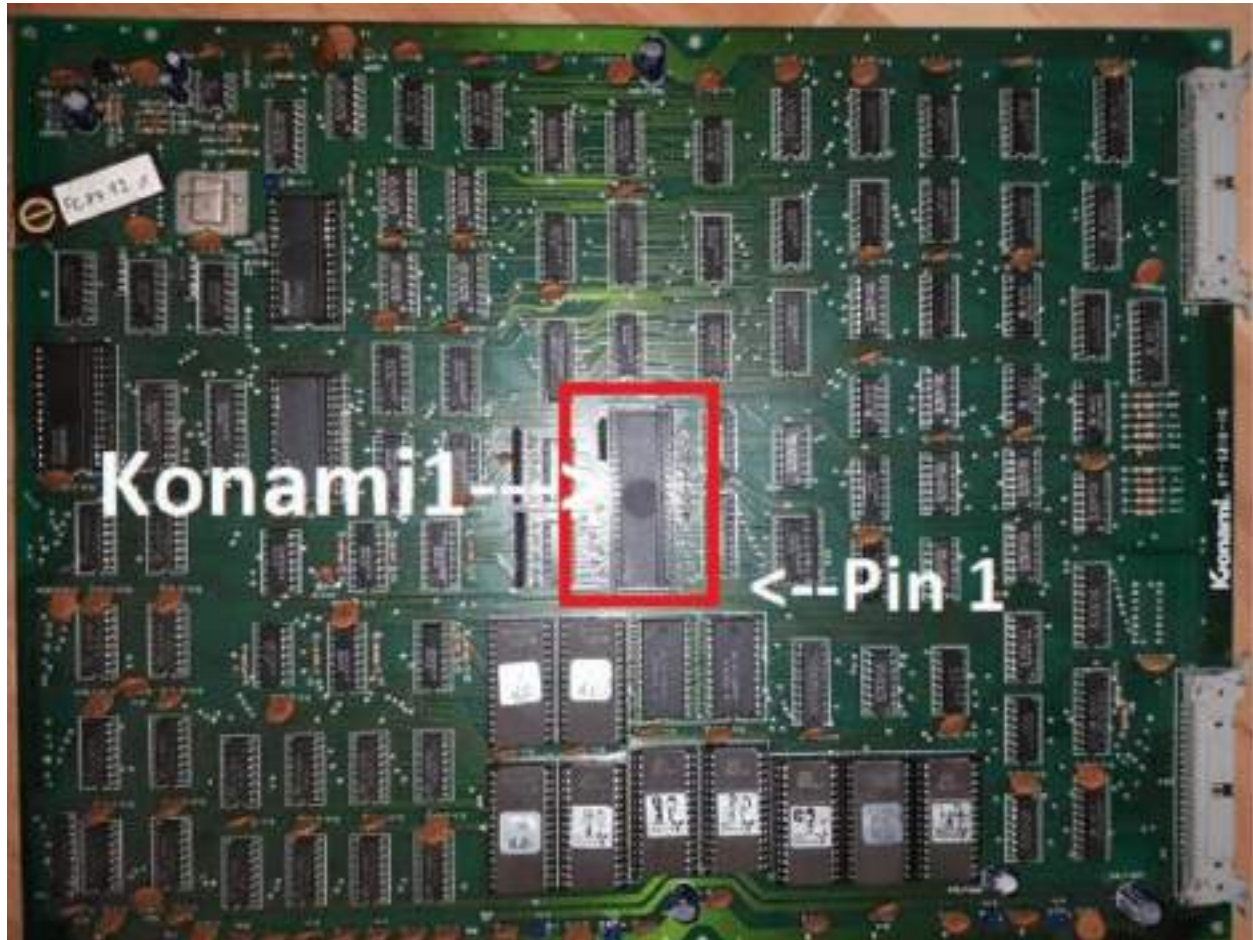

1. Locate your Konami1



2. Remove your Konami1 and store in a safe place [you will no longer need it]
3. Install the Konam1 adapter as shown –



4. Install a 6809E on the kit and install daughter card on top of the Konami1 adapter. [Ensure PIN 1 of the 6809E is installed the proper orientation]



5. [Optional] Program ROMs can be removed



Ensure that the Konam1 is flush in the socket and the kit is seated well in the Konami1

You're done!

- Double check your work
- Install back in cabinet using pictures you took and any marked connectors
- Power up the game and enjoy!
- If the game does not start, turn power off immediately, double check your work.

How do I get to the menu settings?

With the power off on your game. Press and hold P1 while you turn the game on. Release P1 button when the screen tells you to. You are now in the main menu settings. This is a feature built into your kits, so the menu settings are not accessible to your guests or family.

Now, having said that, you need to enable this feature in the menu settings, or disable if you want your kit to give you approximately 5 seconds every time you turn on your game.

Helpful links

Homepage – [Visit HighScoreSaves.com – Free Play & High Score Save Kits](https://www.HighScoreSaves.com)

Product Page - [Juno First Free Play & High Score Save Kit – Buy Now at HighScoreSaves](#)

What's a Wi-Fi kit? - [Learn the Difference Between Wi-Fi Enabled and Standard Save Kits](#)

Tips and Tricks - [Download the HighScoreSaves Tips & Tricks Cheat Sheet \(PDF\)](#)