

Space Invaders

Installation Guide



<https://highscoresave.com/>

Steps for a successful install of your online or offline high score save kit -

- Ensure your gameboard is working 100% before installing kit
- Ensure power to game is off before removing your gameboard from cabinet
- Label any connectors that you will be disconnecting. This will make reinstalling easier once kit is on gameboard
- **Note which way your connectors/cables are on.** (We suggest taking pictures to help you remember!)
- Work in a well-lit area on your workbench

The Space Invaders Kit contains -

- 1 - 8080 Daughter card




Please note – you will need a 8080 to install on this kit. There is an option to purchase in the drop downs [if in stock] on the product page when you order. Or, you can use an existing one.

Overview –

This is what your pcb should look like. This kit will only work on a Space Invaders PCB.

1. Locate your 8080 CPU on your pcb and remove. It's the only 40 pin eprom there.

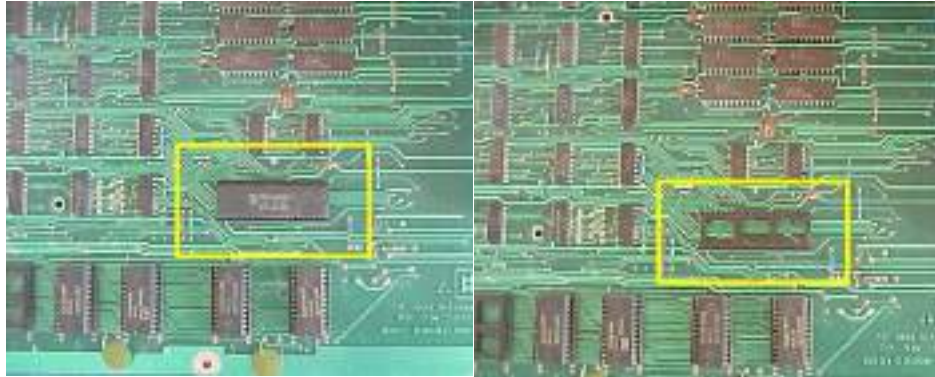

2. Insert the 8080 on you new save kit [Note orientation of the 8080] –
3. Install the 8080 on save kit as shown -



4. Install save kit on your PCB with the 6502 in same orientation before you placed on the save kit [Ensure PIN 1 of the 6502 is installed in the proper orientation]



5. **[Optional]** Program ROMs can be removed



That's it!

Double check your work

Install back in cabinet using pictures you took and any marked connectors

Power up the game and enjoy!

If the game does not start, turn power off immediately, double check your work.